

INSTRUCTIONS FOR USE

FLYⁱⁿBOX[®]

20 / 40

FLYinBOX FLYKILLERS

Flykillers are the best solution for destroying and controlling flying insects. The insects are neutralized by means of electrocution. The flykiller can be suspended from the ceiling, attached to a wall or quite simply laid on a flat surface.

The instructions below explain how to use this flykiller for maximum effectiveness.

WARNING

Flykillers must only be used on dust-free surfaces, with no explosive vapour mix. They should be used indoors and are not suitable for use in a barn, stables or other similar places.

INSTALLATION

Certain installation conditions must be met to ensure an effective control of flying insects in your premises:

1. It must be correctly positioned.
2. The model must be suited to the area to be protected.
3. It must function for 24 hours a day.
4. The bulbs must be changed every 12 months.

POWER SUPPLY

The FLYinBOX flykillers function in 230 V – 50 Hz and must imperatively be connected to an electric socket that is earthed.



Danger: this product is under high tension.

The FLYinBOX flykillers are equipped with safety locks at the level of the removable grids in order to protect the user or maintenance personnel from possible electrocution when opening the grids.

PLACEMENT

It is advisable to attach the FLYinBOX flykiller at least 2 metres from the ground, preferably in the darkest part of the area to be protected, far from windows and lighting, thereby avoiding natural light and exposure to sunlight. In large open spaces, the appliance should be installed in a central position.

The wall-mounting is done with the aid of fixtures (plugs, screws, etc.) adapted to the weight of the appliance. The appliance must be attached to the wall at the level of the notches provided for the purpose on the plastic sides.

The mounting on the ceiling is done with the aid of fixtures (small chains) adapted to the weight of the appliance. The small chain must be attached at the level of the flaps provided for the purpose on the top of the appliance.

The applications vary depending on their location. If you have any questions about the placement, contact your supplier.

WARRANTY

The FLYinBOX flykiller comes with a 5-year warranty under normal conditions of use (not including the bulbs).

IMPORTANT

This appliance may be used by children aged 8 and over and anyone with diminished physical, sensory or mental capacities or no experience or knowledge, if they are correctly supervised or if they have been given the instructions on how to use the appliance with complete safety and if they understand the risks involved.

Children must not play with the appliance. Unattended children must not clean or maintain the appliance.

INFORMATION STRICTLY RESERVED
FOR MAINTENANCE PERSONNEL

Cleaning instructions


Before doing any cleaning, make sure that the appliance is **disconnected from the power supply.**

Draining from the bottom of the appliance



- Make sure that the appliance is disconnected from the power supply.
- Open the hatch located at the bottom of one plastic side.
- Turn over the appliance in order to empty the contents through the hatch.
- Close the draining hatch again.

Replacing the bulbs

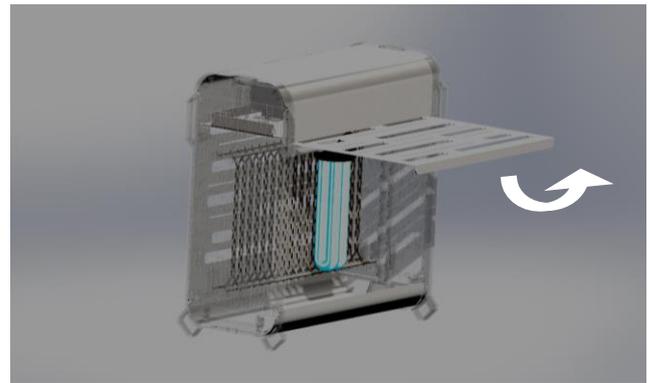

- First of all make sure that the appliance has been emptied beforehand.
- Release the removable grid by pressing lightly.
- Unscrew the low-energy bulbs and remove them from the appliance.
- Simply follow the above procedure to put in the new bulbs.

Replacing the power cord

- If the cord is damaged, it must be replaced by the manufacturer or a competent person to avoid any risk.

FLYinBOX TECHNICAL CHARACTERISTICS

Model	FLYinBox 20	FLYinBOX 40
Code	Fx20i	Fx40i
Wattage	1x20 W (E14)	2x20 W (E14)
Area of application	50 m ²	120 m ²
Consumption	25W max.	50W max.
Voltage electrocution grid	3000 V	3000 V
Power supply	230V / 50 Hz	230V / 50 Hz
Weight	3 kg	3.6 kg
Dimensions	26.5x26x12.5 cm	33x26x12.5 cm
Protection class	IP20	IP20